


# Exterior Roofmount Transponder Mounting Instructions


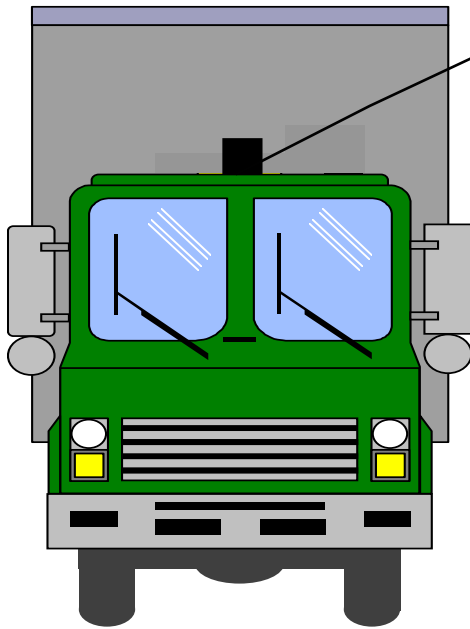


Mount Transponder on centerline of vehicle, 3 inches minimum from front of cab roof.


## Do NOT mount the transponder:



Within 2 feet of any radio transmitting antennas

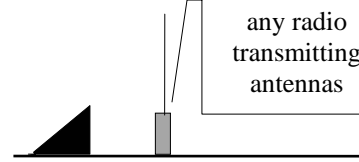



On sloping surface of cab or roof. Bottom of transponder assembly must always be parallel to the road.




Behind Horns, Lights or other metal objects

1 foot minimum

Within 1 foot of any trailers, or other metal objects

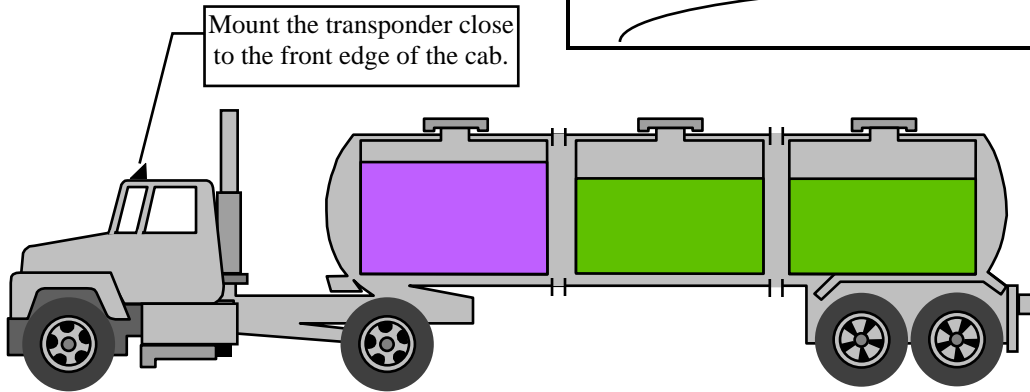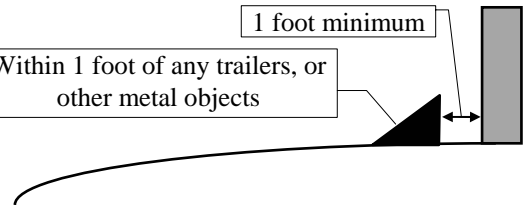

Mount the transponder close to the front edge of the cab.

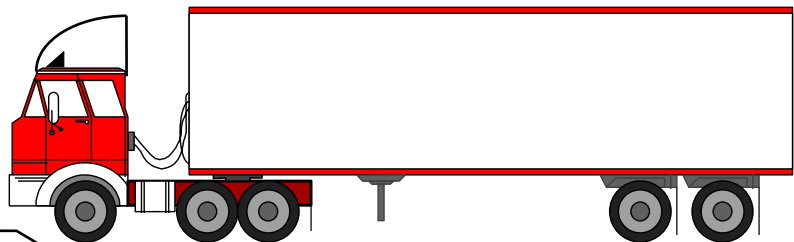

A plastic or fiberglass air dam or spoiler may cover the transponder provided that the cover does not have any metallic paint or metal foil decals on it.